


ROLLING TRIMMER SQUARE CUT ADJUSTMENT PROCEDURE

1. Remove clear plastic clamp
 - a. Move head to home position
 - b. Lift clamp up from middle and work opposite end from head out of side frame


Head in Home Position

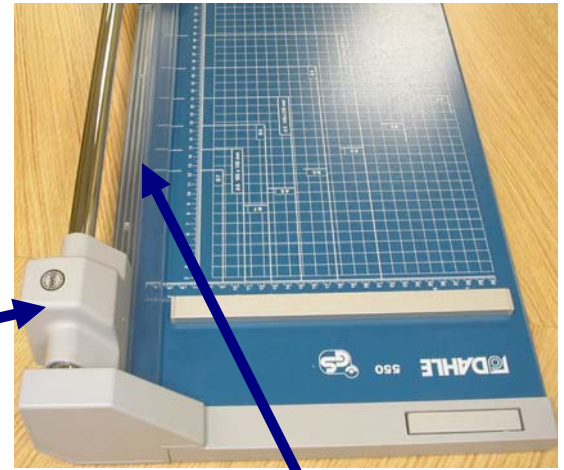


Clear Plastic Clamp

2. Slightly loosen scale bar screws

NOTE: Screws may be either # 2 Phillips-Head or T-15 Torx screws.

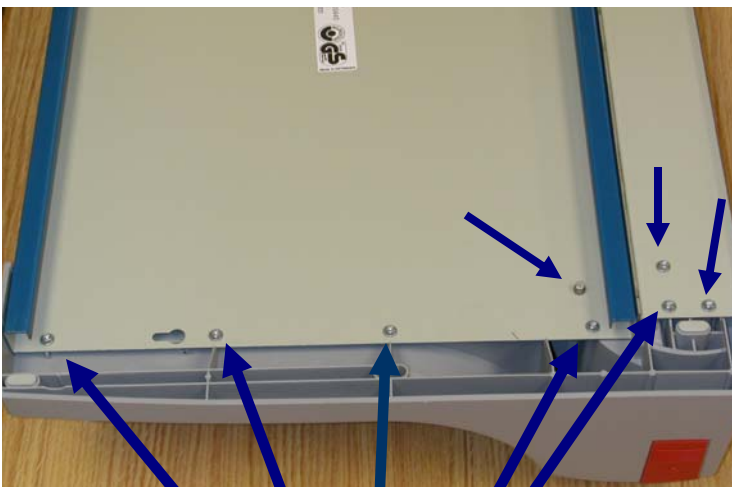


8 each, T-15 Torx Screws

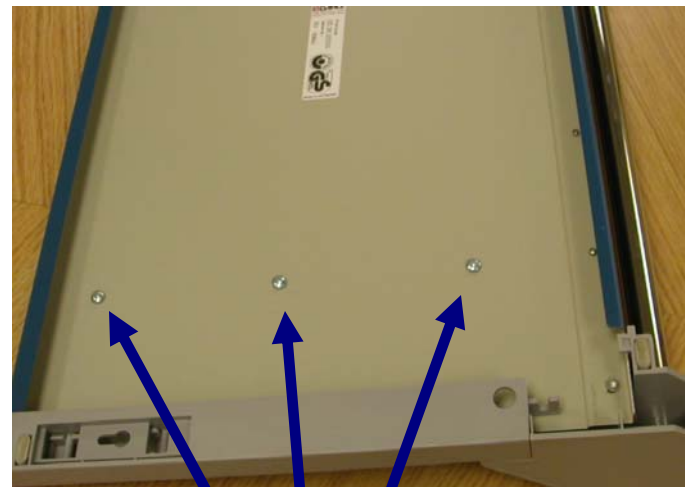


3 each, Phillips-Head Screws

3. Place square flush against scale bar and check that guide is perpendicular to counter-blade

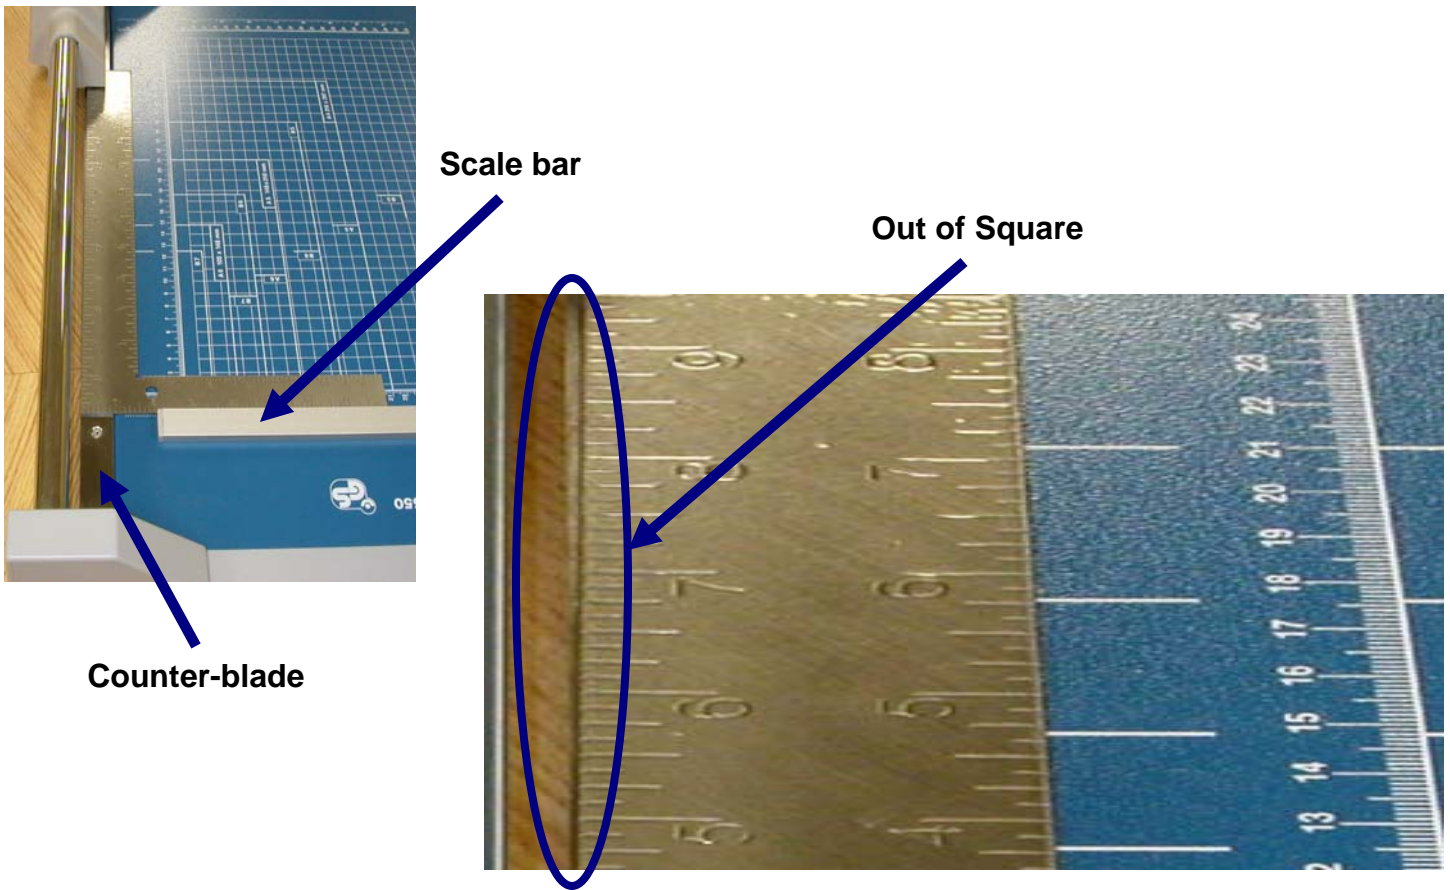

4. Use soft-face hammer or block of wood to adjust scale bar as necessary

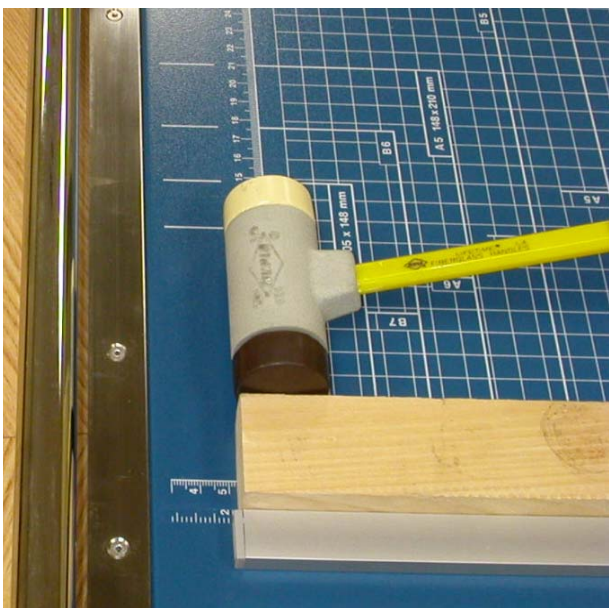

5. Re-check before and after tightening screws

