

User Manual

Vantage® Trimmers 12e, 15e, 18e

Usage

- The cutting blade is secured into place during non-operation. To release upper blade, gently push to the right approximately ½" and lift up.
- Place the material to be cut on the surface of the trimmer. With the use of the **guides**, size the material to the desired length or set the **back-stop** to the correct position.
- Press the blade down slowly. The **clamp** will automatically hold the material in place.
- When cutting is complete, lift the blade to release the **clamp** and remove the material.
- Secure the blade by slightly pushing to the right ½" and dropping the blade down slightly.

Safety Precautions

- To avoid injuries, use the trimmer on a solid, level, and secure surface.
- Always secure the blade to the **base** after use.
- Keep young children away from the trimmer.
- Do not touch the cutting blade with your fingers.

Adjustable Backstop

Saves time and ensures consistent accuracy

Automatic Clamp

Holds work securely and prevents shifting

Metal Base

Will not warp or crack

Screened Guides

Easy to measure and align for precise cutting

If you have any questions, please call a customer service representative at **(800) 995-1379**.