


# 35314

---

## ShredMATIC®

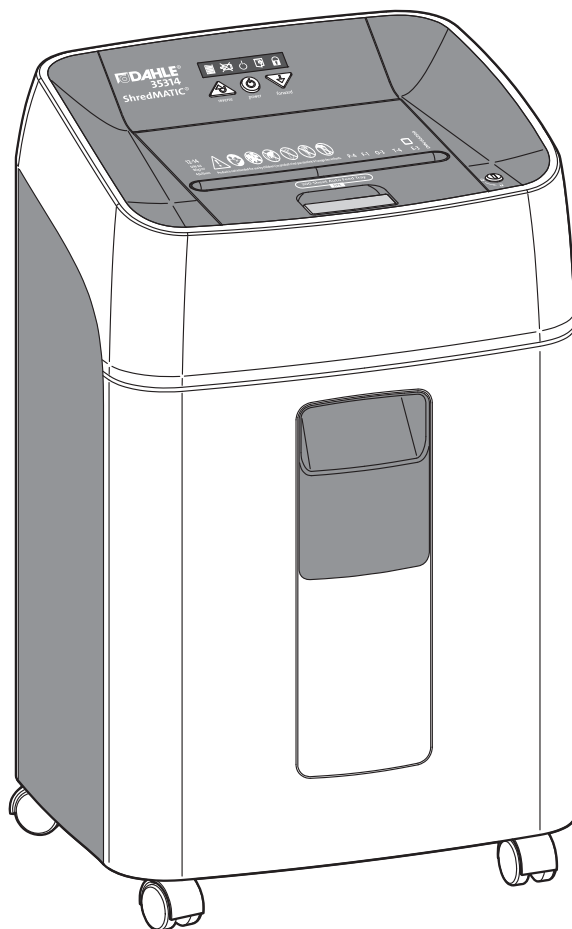

---

CE

**DAHLE®**

en

Instructions



### IMPORTANT!

Read the operating and safety instructions BEFORE placing the document shredder into operation.



You must follow the instructions.

Keep the operating instructions in a safe place ready for later use.

## Table of Contents

1	Important information . . . . .	7
1.1	Intended use, warranty . . . . .	7
1.2	Safety instructions . . . . .	8
1.3	Key to pictograms . . . . .	9
1.4	Scope of supply . . . . .	62
1.5	Technical specifications . . . . .	62
2	Operation . . . . .	63
2.2	Connecting the device to the main supply	63
2.3	Switch on the device . . . . .	63
2.4	Paper shredding . . . . .	64
2.10	Continuous operation . . . . .	66
2.11	Locking . . . . .	67
2.14	CD, DVD & card shredding . . . . .	68
3	Maintenance / troubleshooting . . . . .	70
3.1	Emptying shredding waste . . . . .	70
3.3	bin/lid open . . . . .	70
3.4	Overheated . . . . .	71
3.5	Paper jam manual feed . . . . .	71
3.7	Paper jam automatic feed . . . . .	72
3.10	Paper jam locked automatic feed . . . . .	73
3.13	Emergency release . . . . .	74
3.17	Cleaning the shredder . . . . .	75

### 1.1 Intended use, warranty

The document shredder is intended to be used for shredding paper.

Depending on the model variant, a small amount of the following materials can also be shredded:

- CDs/DVDs, bank cards and credit cards (see technical data).
- The normal staples and paper clips found in paper documents (exception: security level P6 and P7 devices).

This device is equipped with an automatic feeder for paper stacks consisting of unfolded single sheets (max. 100g/m<sup>2</sup>). Stapled paper, with paper clips as well as with staples, usually can be processed as well. Therefore it is mandatory, that the clamps and paper clips must be positioned at the rear end of the paper tray (facing away from the user)

To extend the life of the device, it is however recommended to remove paper clips/clamps before shredding. In individual cases, depending on the quantity and position of the paper clips/staples and the thickness of the stapled paper stack, a misfeed can occur and the shredding process may be interrupted

Wear, damage due to improper use or unauthorised modifications and repairs are not covered by the warranty or the guarantee.

The document shredder was designed for private use and for use in normal office environments.

The following conditions apply to the performance in terms of sheets listed under technical data:

Maximum number of sheets that are shredded in one pass under the following conditions: New cutting rollers, oiled if needed, cold motor, power supply with



nominal voltage and nominal frequency (230 V/50 Hz; 120 V/60 Hz). Deviations may result in reduced sheet processing and increased operating noises. The sheets are fed centrally and lengthwise at a 90 degree angle. The performance in terms of sheets can also vary depending on the paper properties and input.




































## 1.2 Safety instructions

- Do not place the device near a source of heat.
- Store, transport and operate the device in an upright position only.
- Only use liquids and gases on the device that comply with DAHLE guidelines.
- Do not open up the device.
- Only operate the device in closed spaces, at temperatures of between 10 °C and 25 °C (50 °F to 77 °F) and at a non-condensing humidity of between 15% and 95%.
- Ensure that the building installation has short-circuit protection: max. 16 A (US max. 20 A).
- Do not operate the document shredder without inserting documents.
- The device is not intended for use by persons (including children) with restricted physical, sensory or mental capabilities or a lack of experience and knowledge, unless they are working under supervision or receive detailed instruction about how to use the device from a person who is responsible for safety.





**Dispose of the document shredder properly in an environmentally friendly way at an authorised collection point. Do not dispose of any parts of the document shredder or packaging in domestic waste.**


### 1.3 Key to pictograms

	Important information		Technical specifications - Subject to technical modifications.
	User information/safety instructions		Noise level when operated without shredding documents
	WARNING		Intake speed
	Do not use near caustic substances.		Shredded paper particles
	Place the device in a stable position on the floor, leaving a gap of 100 mm to the wall, ensure no heat can accumulate, engage brake mechanisms (depending on type)		Shredded CD/DVD particles
	Do not use near inflammable liquids or gases.		Shredded card particles
	Automatic start-up		Weight
	Do not expose to moisture		The power plug is used to disconnect the power supply.
	This document shredder is not intended to be used by children (the product is not a toy).		The mains socket must be easily accessible at all times.
	Do not touch the paper feed with your hands.		How to use
	Do not allow items of clothing to come into contact with the paper feed.		Document shredder on standby
	Do not allow your hair to come into contact with the paper feed.		Document shredder in operation
	Keep spray cans away from the device.		Automatic shut-down!
	Remove paper clips and staples before shredding.		The document shredder will switch off automatically to cool down if used for a long time and /or if overloaded
	Do not insert any diskettes.		Maintenance instructions / troubleshooting
	Always wear safety goggles when destroying CDs/DVDs!		Container full
	Disconnect the document shredder from the electrical power supply before performing maintenance work.		Possible malfunctions
			Automatic switch-off when housing is open

1.4

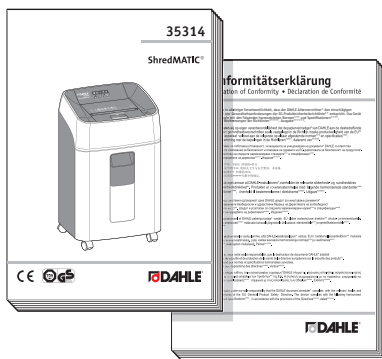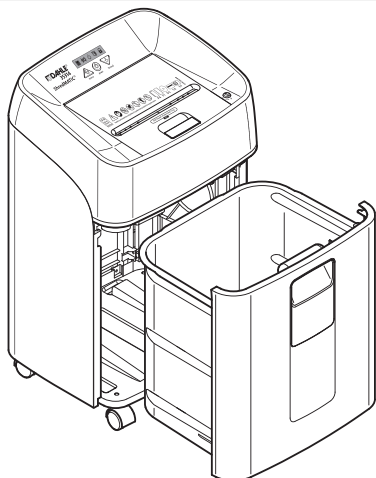

1.5

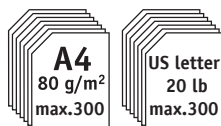





2,5m/min



2,5m/min




220 - 240 V / 50 - 60 Hz  
110 - 120 V / 50 - 60 Hz

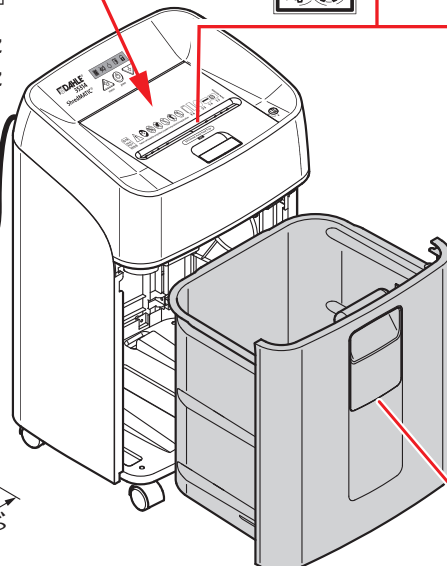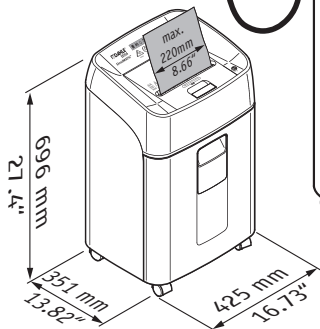

DIN 66399  
P-4 / F-2



4 x 15 mm



DIN 66399  
T-4 / E-3



DIN 66399  
0-3



≤54 dB (A)



18 kg  
40 lbs


40 l / 10.5 gal




## 2.1



## 2.2

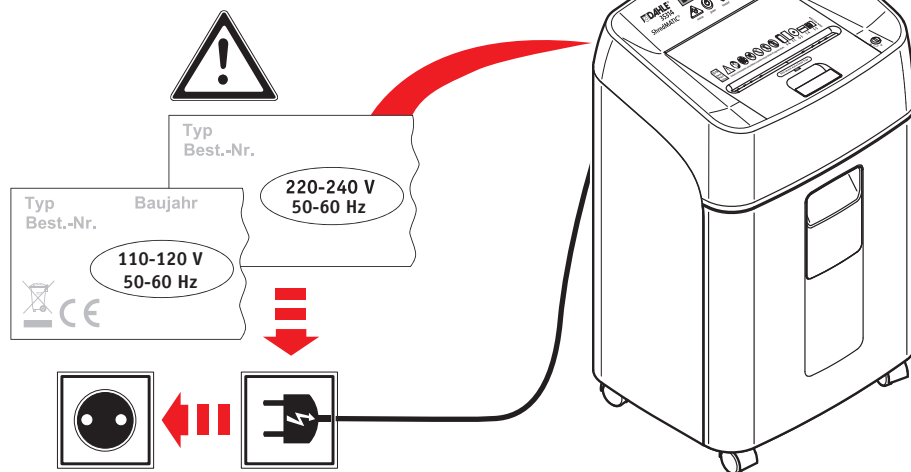

## 2.3

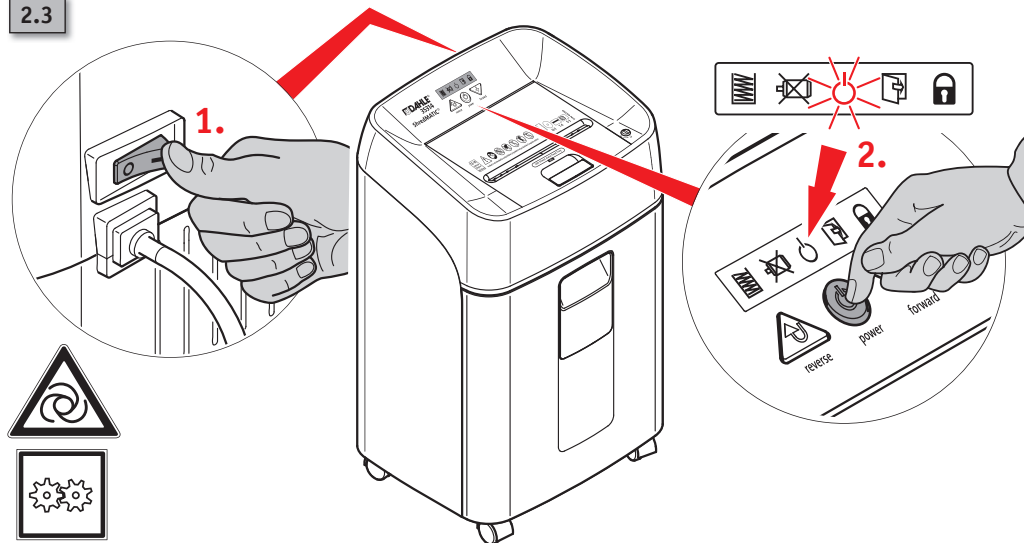


2






2.4



2.5



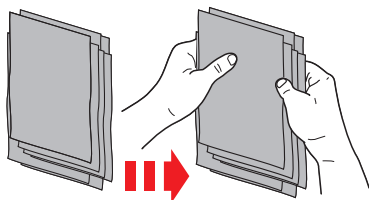


O.K.

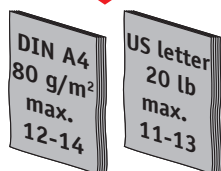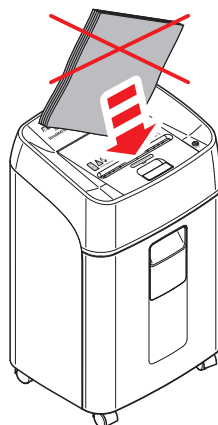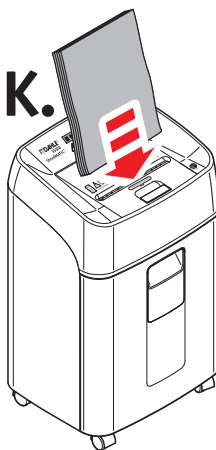


O.K.

2.6

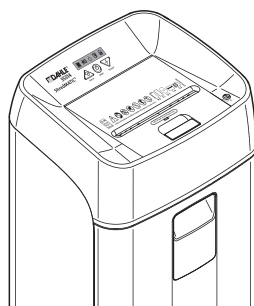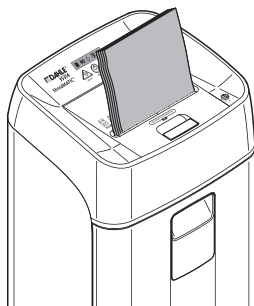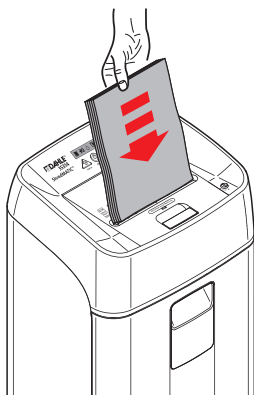




2.7

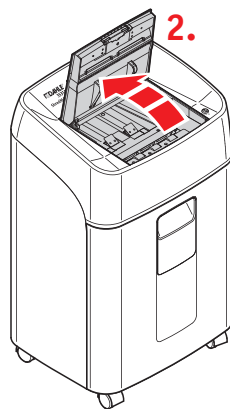



O.K.

2.8



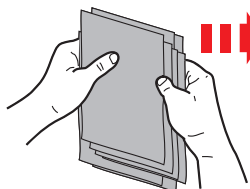


O.K.

O.K.

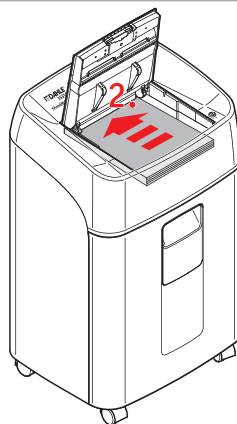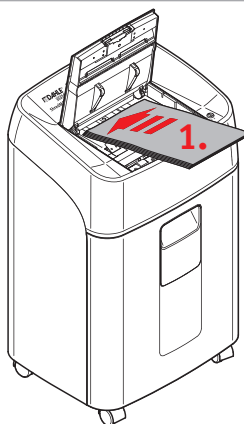




2.9

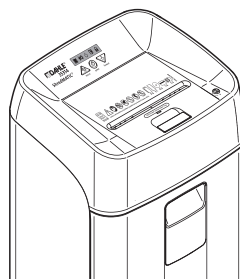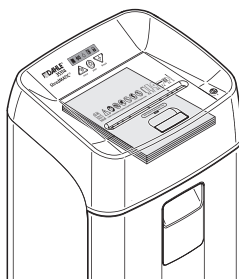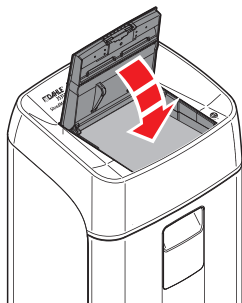






2.10

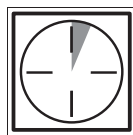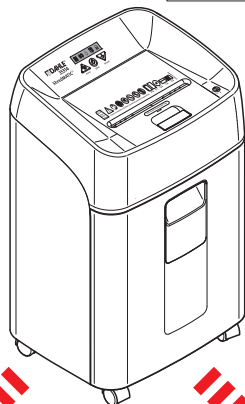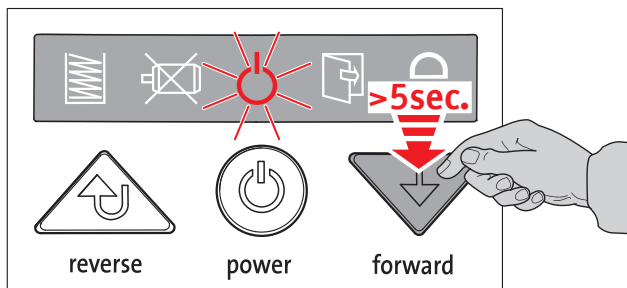


5min

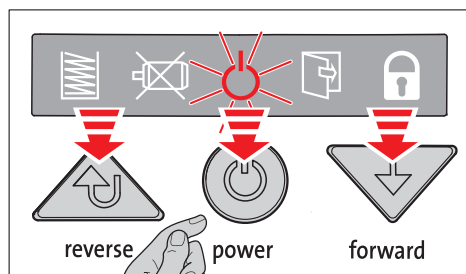





2.11

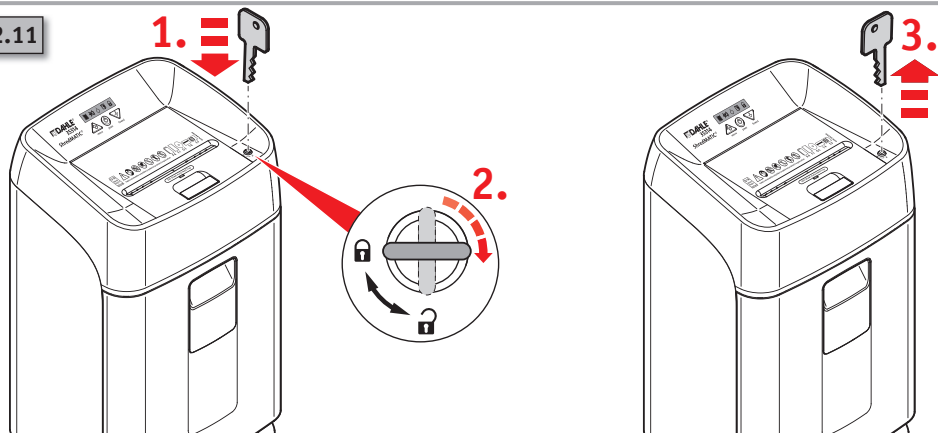

2.12

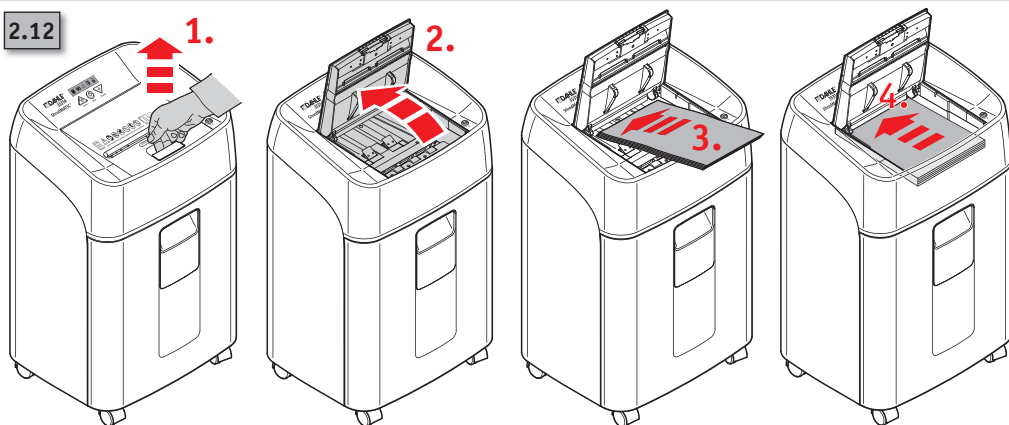

2.13

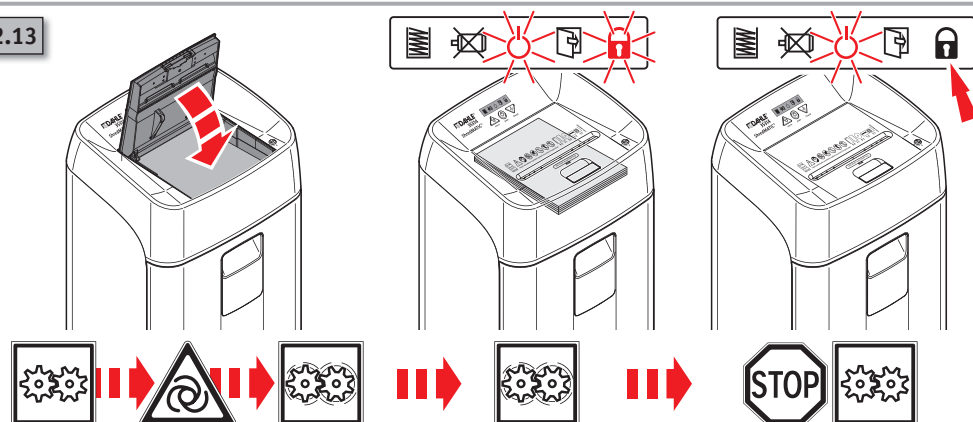


2




2.14




2.15

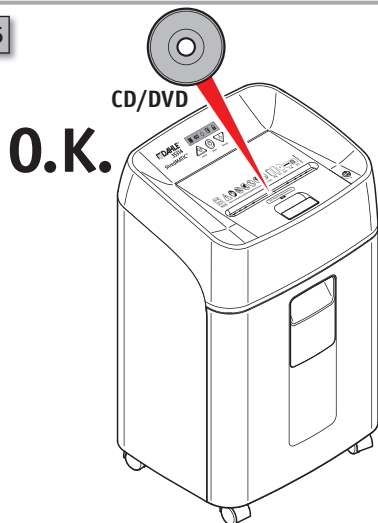

**O.K.**



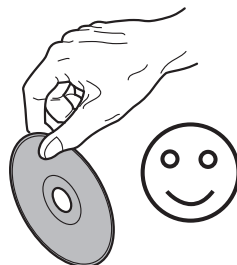


~~**O.K.**~~

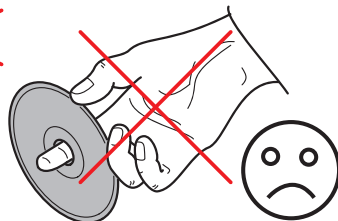

2.16


max. 1

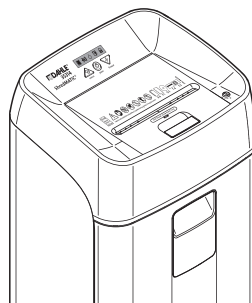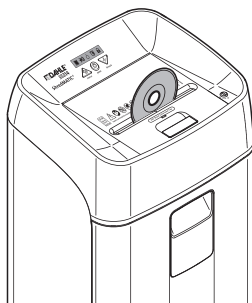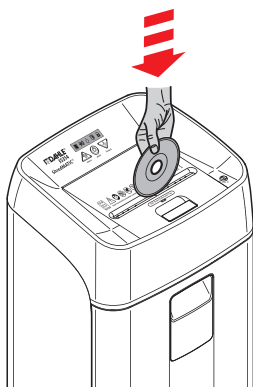




2.17


Credit card max. 1

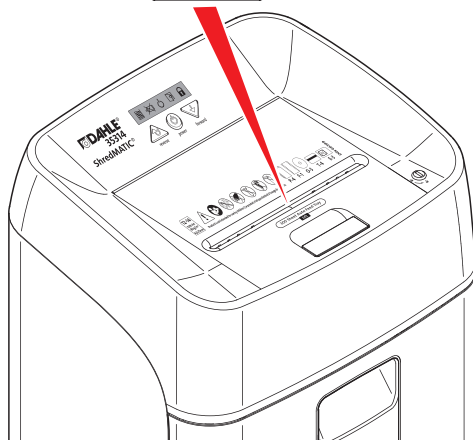

O.K.

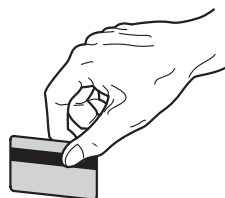




~~O.K.~~

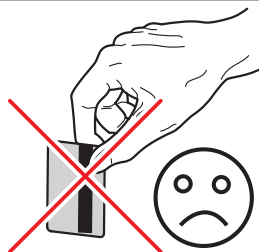





2.18




max. 1

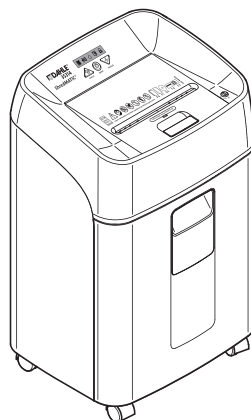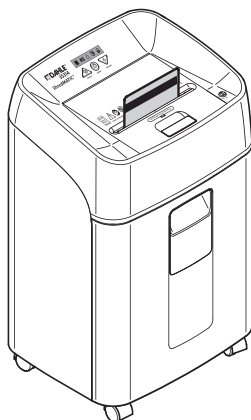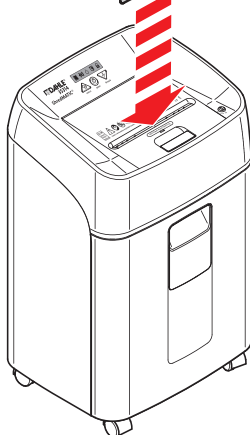

~~O.K.~~

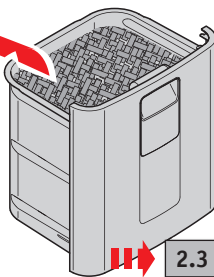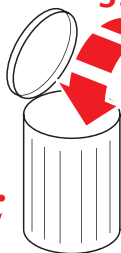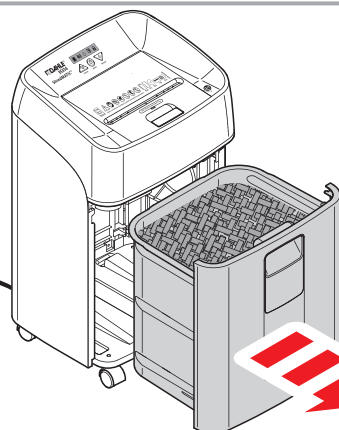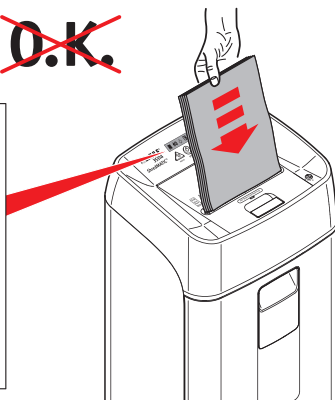


## 2.3

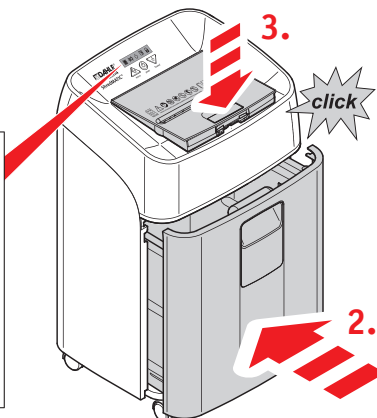




3.4


~~O.K.~~


reverse




power



forward



2.5




reverse



power

3.5

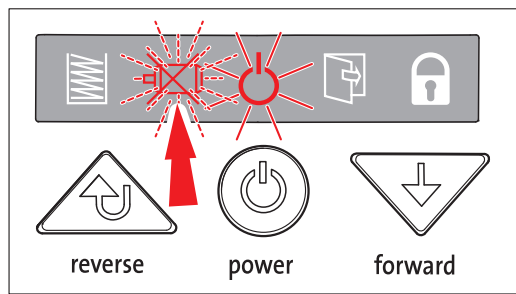
~~O.K.~~


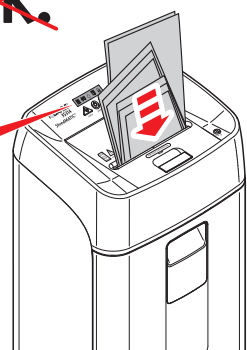
reverse



power




forward



3.6

2.



reverse



power




1.

3 Sek.



3.

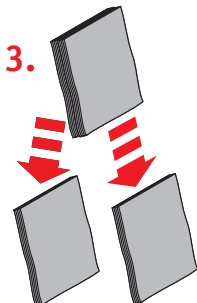

2.5



3




3.7



~~O.K.~~

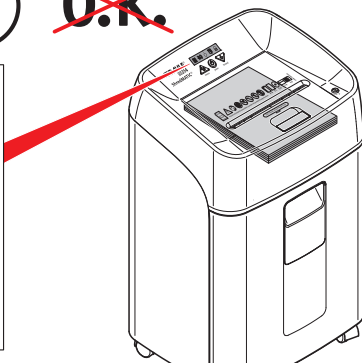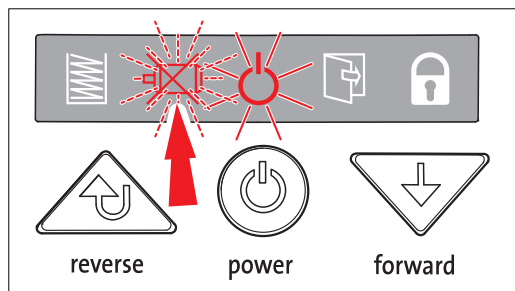


3.8

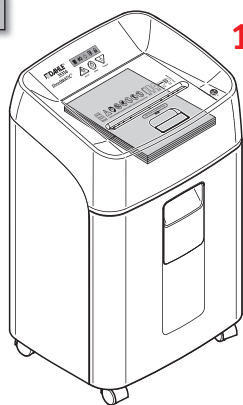


1.



3 Sek.

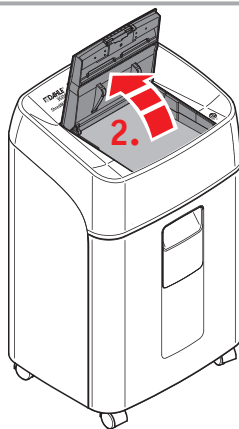


2.

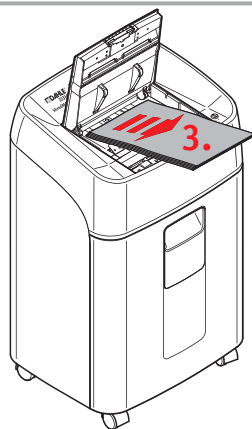

3.



3.9

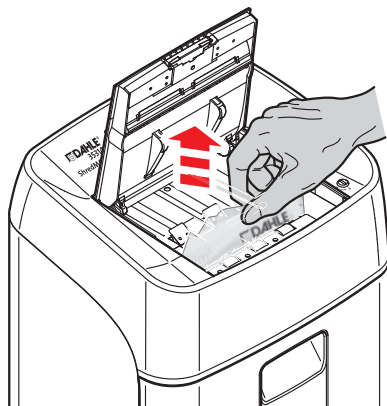

O.K.



3.10

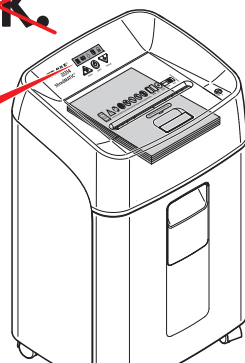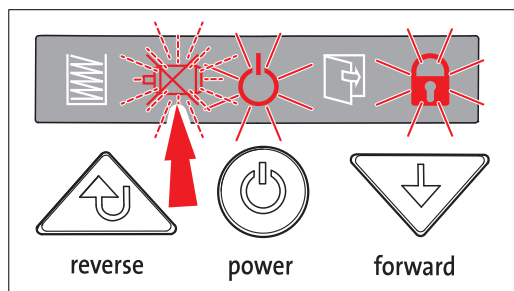
~~O.K.~~


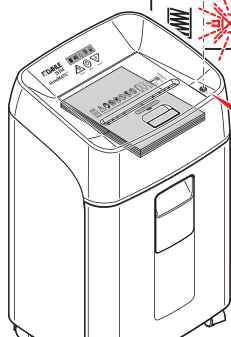
3.11

1.




3.


2.



4.


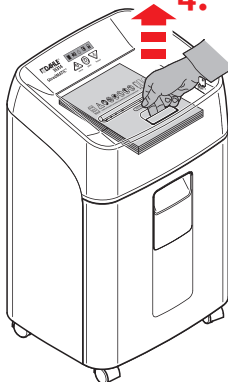


5.

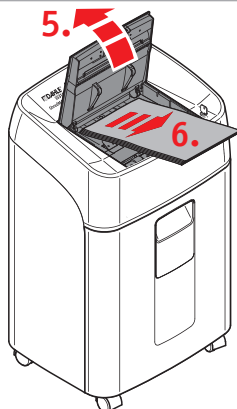

6.





3.12

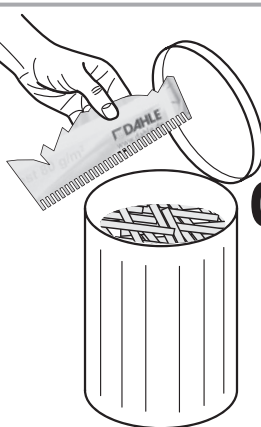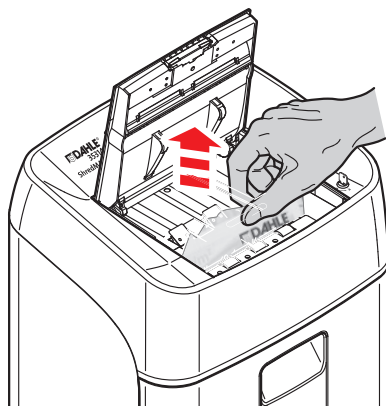
**O.K.**









~~O.K.~~

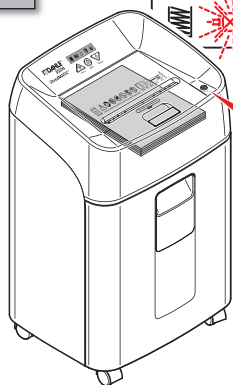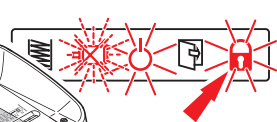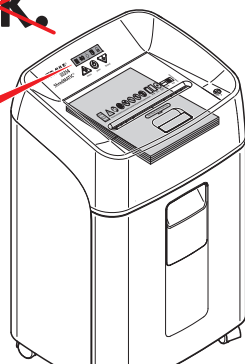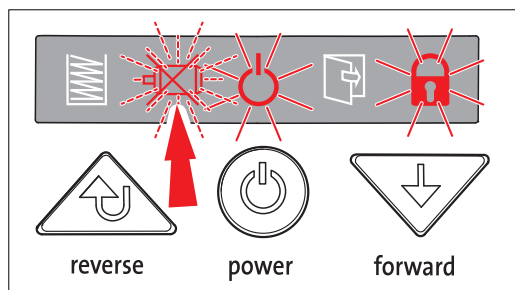


## 2.

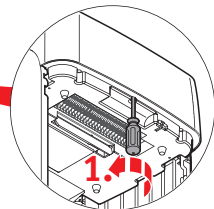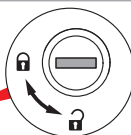


1.  

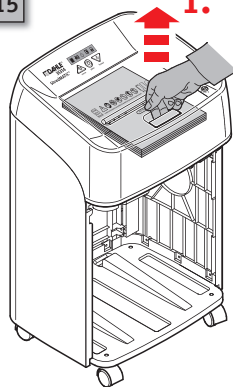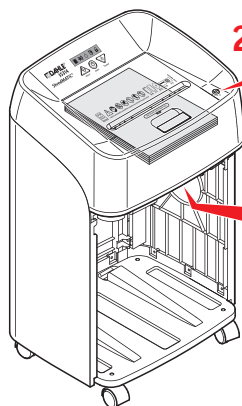

## 2.


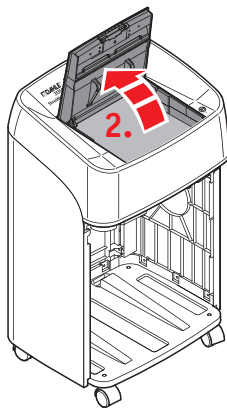


3.

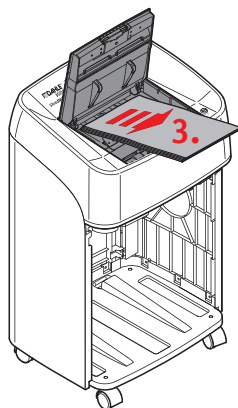



3.16

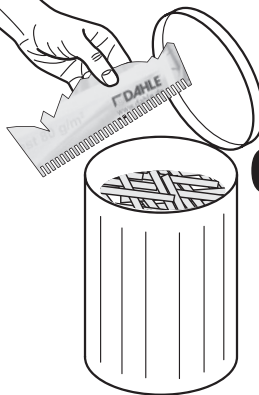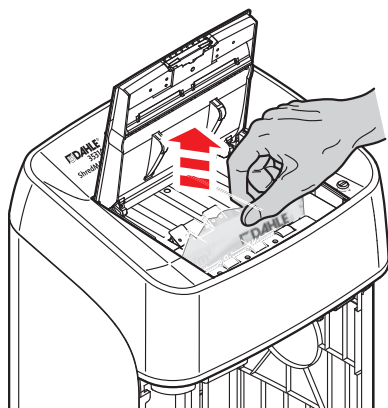


O.K.

3.17




1.

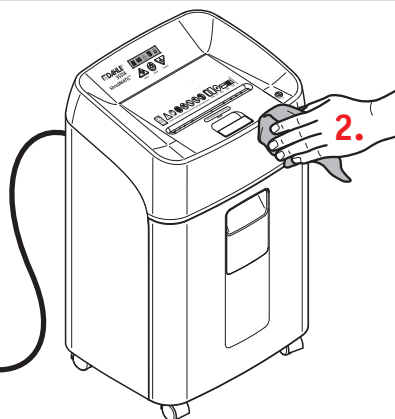

3.18



1.

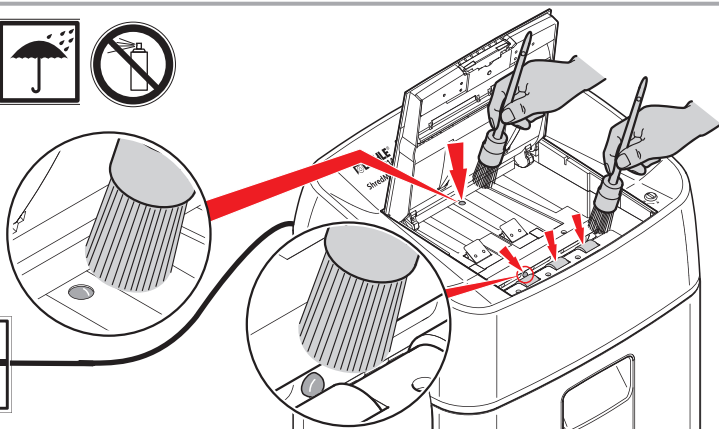



Dahle North America, Inc.  
49 Vose Farm Road  
Peterborough, NH 03458  
Tel. (800) 995-1379  
info@dahle.com  
www.dahle.com

